

Assembly Instruction Sheet #IS-ER1814-ER1714

For Styles ER1814BN, ER1814PN, ER1814WS AND ER1814IS Pendant Lights & ER1714BN, ER1714PN, ER1714WS and ER1714IS Semi-Flush Lights

Please go to www. quozel. com for product cleaning tips. Go to the **Care + Maintenance** selection.

Tools Required: Flathead screwdriver, Phillips screwdriver, pliers, wire cutters, wire strippers, electrical tape, safety glasses.

Light Source: (1) Medium Base 100W bulb Maximum, Alternate bulb (1) 23W CFL Maximum.

Estimated Assembly Time: 30-45 minutes

Preparation: Identify and inspect all parts before beginning installation. Check package content list and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact customer service for replacement parts.

Note: This fixture can be mounted as pendant light or semi-flush light. Refer to respective installation steps for installations.


⚠ Warnings and Cautions

Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt.

These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation.

Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal. Do not subject glass parts to any shock while in operation or shattering may result.

Package Contents

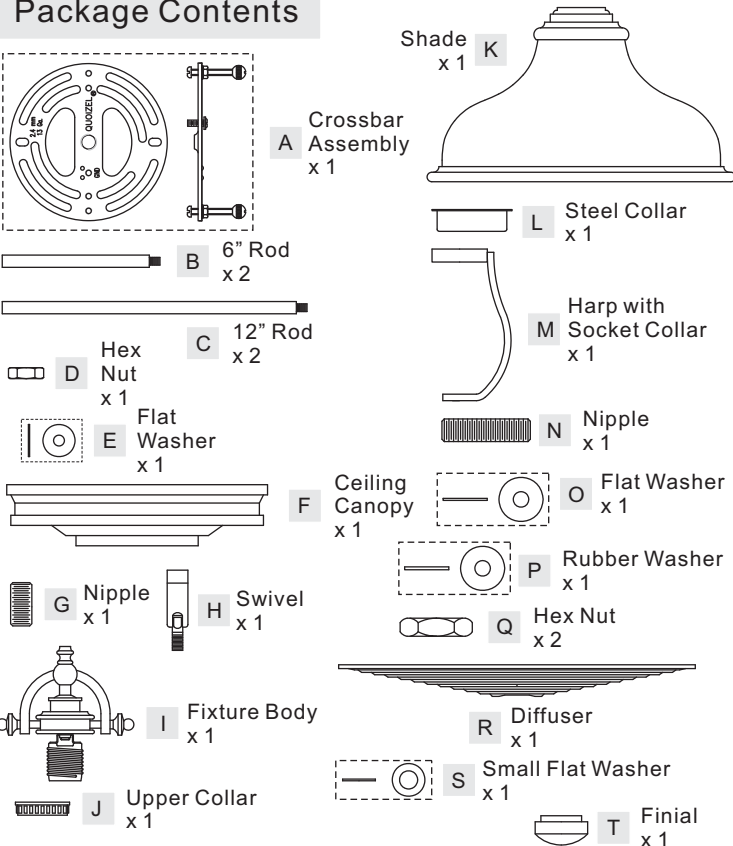

according to your hanging height.
C. Pass the supply wires and ground wire through the chosen rods (B/C) and the Ceiling Canopy with Swivel. Thread the Fixture Body (I), the chosen Rods (B/C) and the Ceiling Canopy with Swivel together. Hand tighten until snug.

Suggested rods for Ceiling height :
8' ceiling : use (2) 12" rods
9' ceiling : use (2) 6" rods and (2) 12" rod

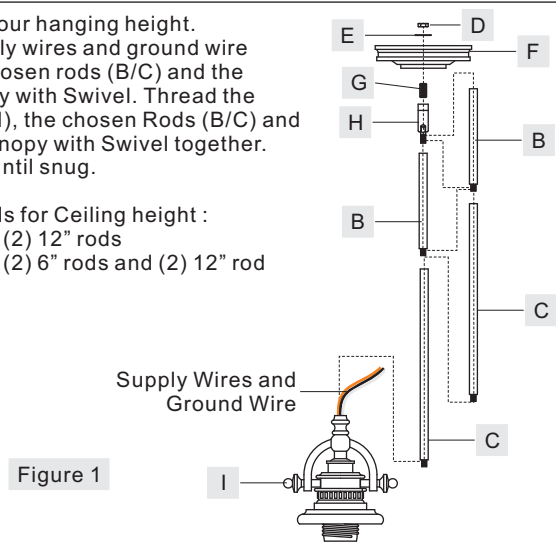


Figure 1

STEP 2 - Install Crossbar Assembly

A. Pass the supply wires through the Crossbar Assembly (A). Attach the Crossbar Assembly (A) to the Outlet Box with the head of the Green Ground Screw facing you. Secure it with Outlet Box Screws (not included). Tighten until snug.

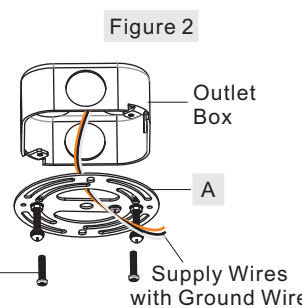


Figure 2

Assembly Instructions for Pendant Lights ER1814BN, ER1814PN, ER1814WS & ER1814IS

STEP 1 - Install Ceiling Canopy, Rods and Socket Assembly together

- A. Thread Nipple (G) onto the Swivel (H). Place Ceiling Canopy (F) and Flat Washer (E) over the Nipple (G), secure by threading Hex Nut (D) onto the Nipple (G), tighten until snug.
- B. Determine the Rods (B/C) to be assembled to the Fixture Body (I)

STEP 3 - Fit Ceiling Canopy to Crossbar Assembly

A. Remove mounting balls from the Crossbar Assembly (A). Fit the Ceiling Canopy (F) to the Crossbar Assembly (AA) and secure with mounting balls. Note: The Ceiling Canopy (F) should be snug against the ceiling and the mounting balls. If

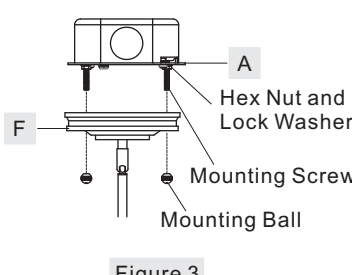


Figure 3

Thank you for purchasing a Quozel product.
Need assistance with parts or assembly? Call Quozel customer service at 1-631-273-2700
or visit us on-line at www. quozel. com

not, adjust the length of the nipple on the Crossbar Assembly (A) by unscrewing the preassembled hex nut and lock washer and then screwing the mounting screws in or out of the crossbar until the correct length is achieved. Once the Ceiling Canopy (F) is secure, remove the mounting ball and Ceiling Canopy (F) and proceed to Step 4.

STEP 4 - Wire Connections

A. Use standard wire connectors (not included) to make all wire connections. (Connectors are not included with fixture.) Twist connectors until wires are tightly joined together. Wrap each connection with approved electrical tape and carefully stuff all the connected wires into the Outlet Box.

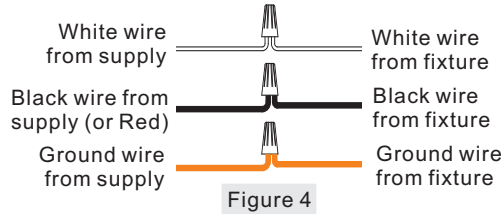


Figure 4

STEP 5 - Install Fixture Body

A. Carefully tuck all wires into the outlet box and position the Ceiling Canopy (F) over the outlet box. Align the holes in the Ceiling Canopy (F) with the mounting screws, then attach the Ceiling Canopy (F) using the previously removed mounting balls. Hand tighten until snug.

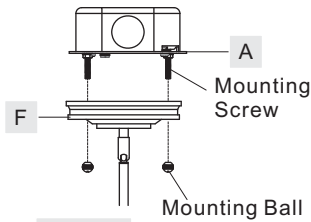


Figure 5

STEP 6 - Install Shade and Bulb

A. Place the Upper Collar (J), the Shade (K) and the Steel Collar (L) in turn and secure with the Harp with Socket Collar (M). Hand tighten until snug.
B. This fixture uses standard bulb with medium base. Maximum 100 watts. Insert bulb and screw snugly into place.

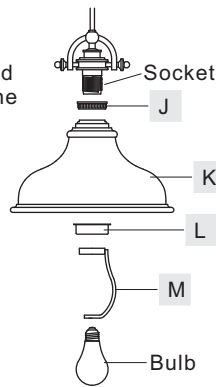


Figure 6

STEP 7 - Install Diffuser

A. Thread one Hex Nut (Q) to the Nipple (N) approx half way. Screw the Nipple (N) into the bottom end of the Harp (M) and tighten until snug. By using pliers, thread the Hex Nut (Q) against the Harp (M) and hand tighten until snug.
B. Thread another Hex Nut (Q) onto the end of the Nipple (N) and adjust it to proper location for rest components. Attach the Flat Washer (O), the Rubber Washer (P), the Diffuser (R) and the Small Flat Washer (S) over the Nipple (N) in turn. Secure them with the Finial (T) and hand tighten until snug.


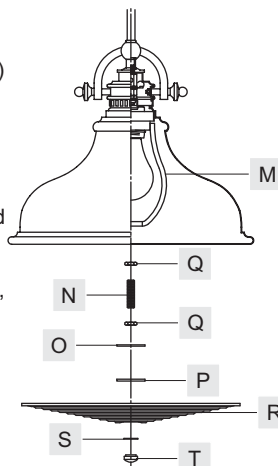


Figure 7

Your fixture is now assembled and ready to use. Enjoy!

Assembly Instructions for Semi-Flush Lights ER1714BN, ER1714PN, ER1714WS & ER1714IS

Part B, Part C and Part H will not be used in the assembly of the Semi-Flush Light fixture. Please set aside these parts.

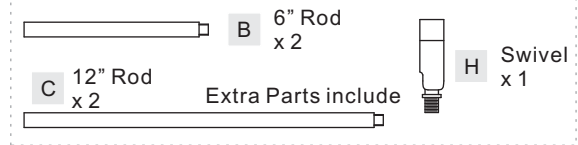

Extra Parts include

STEP 8 - Install Ceiling Canopy to Socket Assembly

A. Pass supply wires with ground wire through Nipple (G), Ceiling Canopy (F), Flat Washer (E) and Hex Nut (D). Thread Nipple (G) onto the Fixture Body (I). Place the Ceiling Canopy (F) and the Flat Washer (E) onto the Nipple (G). Secure by threading the Hex Nut (D) onto the Nipple (G). Hand tighten until snug. Cut the wires leaving approximately 6" of wire extending from the Ceiling Canopy.

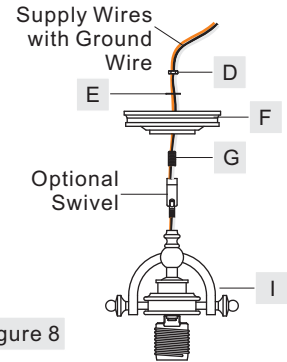


Figure 8

B. Optional Swivel: Install the swivel to the Fixture Body (I) and then attach Nipple (G) and the Ceiling Canopy (F) to the Swivel using the Flat Washer (E) and the Hex Nut (D).

STEP 9 - Install Crossbar Assembly

A. Pass the supply wires through the Crossbar Assembly (A). Attach the Crossbar Assembly (A) to the Outlet Box with the head of the Green Ground Screw facing you. Secure it with Outlet Box Screws (not included). Tighten until snug.

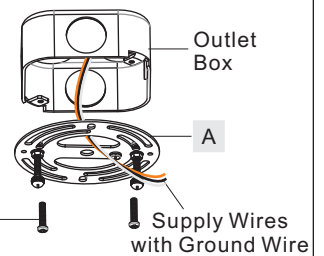


Figure 9

STEP 10 - Fit Ceiling Canopy to Crossbar Assembly

A. Remove mounting balls from the Crossbar Assembly (A). Fit the Ceiling Canopy (F) to the Crossbar Assembly (A) and secure with mounting balls. Note: The Ceiling Canopy (F) should be snug against the wall and the mounting balls. If not, adjust the length of the nipple on the Crossbar Assembly (A) by unscrewing the preassembled hex nut and lock washer and then screwing the mounting screws in or out of the crossbar until the correct length is achieved. Once the Ceiling Canopy (F) is secure, remove the mounting ball and Ceiling Canopy (F) and proceed to Step 11.

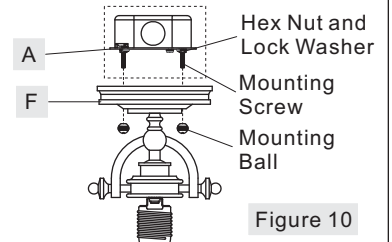


Figure 10

STEP 11 - Wire Connections

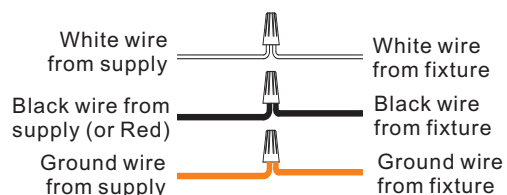


Figure 11

Thank you for purchasing a Quoizel product.
Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700
or visit us on-line at www.quoise.com

(Continue to Step 11)

A. Use standard wire connectors (not included) to make all wire connections. (Connectors are not included with fixture.) Twist connectors until wires are tightly joined together. Wrap each connection with approved electrical tape and carefully stuff all the connected wires into the Outlet Box.

STEP 12 – Install Fixture Body

A. Carefully tuck all wires into the outlet box and position the Ceiling Canopy (F) over the outlet box. Align the holes in the Ceiling Canopy (F) with the mounting screws, then attach the Ceiling Canopy (F) using the previously removed mounting balls. Hand tighten until snug.

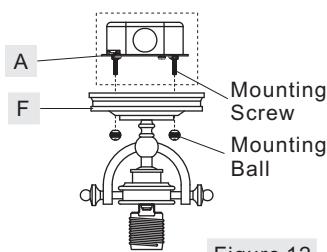


Figure 12

STEP 13 – Install Shade and Bulb

A. Place the Upper Collar (J), the Shade (K) and the Steel Collar (L) in turn and secure with the Harp with Socket Collar (M). Hand tighten until snug.
 B. This fixture uses standard bulb with medium base. Maximum 100 watts. Insert bulb and screw snugly into place.

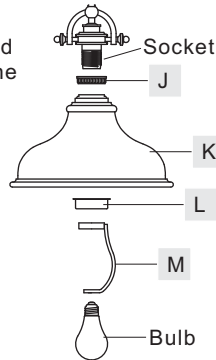


Figure 13

STEP 14 – Install Diffuser

A. Thread one Hex Nut (Q) to the Nipple (N) approx half way. Screw the Nipple (N) into the bottom end of the Harp (M) and tighten until snug. By using pliers, thread the Hex Nut (Q) against the Harp (M) and hand tighten until snug.
 B. Thread another Hex Nut (Q) onto the end of the Nipple (N) and adjust it to proper location for rest components. Attach the Flat Washer (O), the Rubber Washer (P), the Diffuser (R) and the Small Flat Washer (S) over the Nipple (N) in turn. Secure them with the Finial (T) and hand tighten until snug.




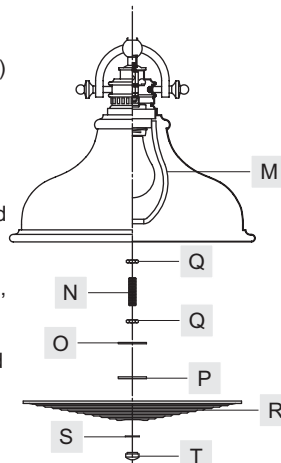


Figure 14

Your fixture is now assembled and ready to use. Enjoy!


PENDANT LIGHTS:
 ER1814BN/ER1814PN
 ER1814WS/ER1814IS

FINISH: BRUSHED NICKEL
 PALLADIAN BRONZE
 WEATHERED BRASS
 IMPERIAL SILVER

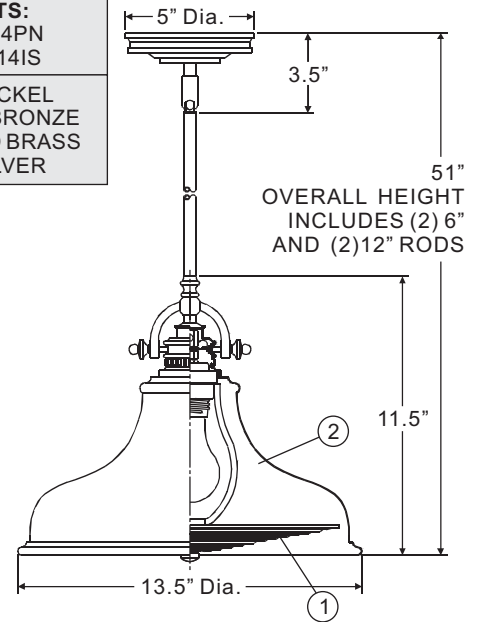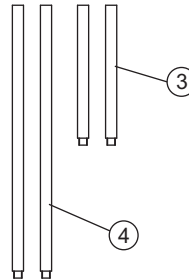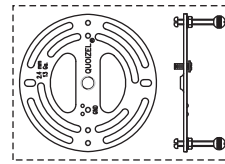


SEMI-FLUSH LIGHTS:
 ER1714BN/ER1714PN
 ER1714WS/ER1714IS


FINISH: BRUSHED NICKEL
 PALLADIAN BRONZE
 WEATHERED BRASS
 IMPERIAL SILVER

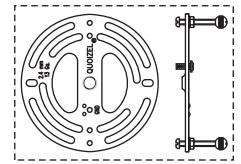

NOTE: ALL DIMENSIONS ARE ROUNDED UP TO THE NEAREST 1/2"

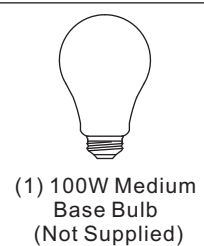

(1) 100W Medium Base Bulb (Not Supplied)

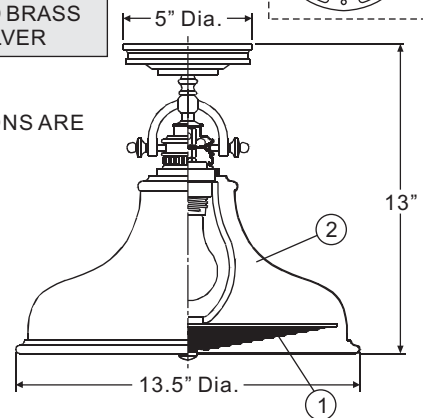

NO.	PART NUMBER	REPLACEMENT	REQ.	STYLE NUMBER
1	G134DI	DIFFUSER	1	ER1814BN, ER1814PN ER1814WS, ER1814IS ER1714BN, ER1714PN ER1714WS, ER1714IS
2	M2127SH	METAL SHADE	1	ER1814BN
3	9006EXBN	6" ROD	2	
4	9012EXBN	12" ROD	2	ER1814PN
2	M2129SH	METAL SHADE	1	
3	9006EXPN	6" ROD	2	ER1814WS
4	9012EXPN	12" ROD	2	
2	M2432SH	METAL SHADE	1	ER1814IS
3	9006EXWS	6" ROD	2	
4	9012EXWS	12" ROD	2	ER1814IS
2	M2128SH	METAL SHADE	1	
3	9006EXIS	6" ROD	2	ER1814IS
4	9012EXIS	12" ROD	2	

Thank you for purchasing a Quoizel product.
 Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700
 or visit us on-line at www.quoise.com