

Please go to www.quoizel.com for product cleaning tips. Go to the **Care + Maintenance** selection.

Tools Required: Flathead screwdriver, Phillips screwdriver, pliers, wire cutters, wire strippers, electrical tape, safety glasses.

Light Source: (2) Medium Base 75W Maximum. Alternate Bulbs (2) 19W CFL.

Estimated Assembly Time: 30-45 minutes

Preparation: Identify and inspect all parts before beginning installation. Check package content list and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact customer service for replacement parts.

 
⚠ Warnings and Cautions

Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt.


These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation.

Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal. Do not subject glass parts to any shock while in operation or shattering may result.


Package Contents

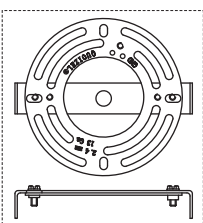


A Crossbar
x 1

 


B Mounting Screw
x 2

 


C Ceiling Canopy
x 1

 


D Rod
x 1

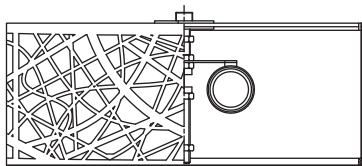 


E Socket Assembly
x 1

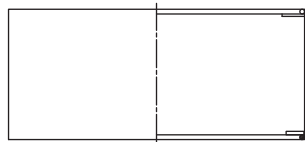 

F Shade
x 1

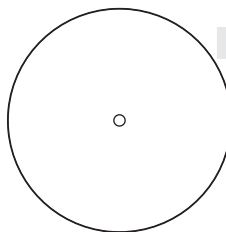 

G Diffuser
x 1

 

H Rubber Washer
x 2



I Flat Washer
x 2



J Finial
x 1

STEP 1 – Assemble Ceiling Canopy to Socket Assembly

- Thread one end of the Rod (D) onto the top center of the Socket Assembly (E) and hand tighten until snug.
- Thread the Ceiling Canopy (C) onto the top end of the Rod (D) and hand tighten until snug.

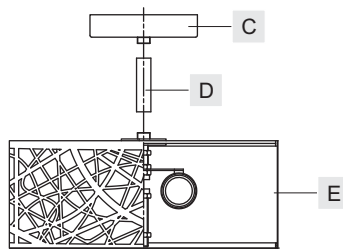 


Figure 1

STEP 2 – Attach Crossbar to Outlet Box

- Attach the Crossbar (A) to Outlet Box and secure by threading Outlet Box Screws (not supplied) into the Mounting Holes on the Outlet Box. Tighten until snug.

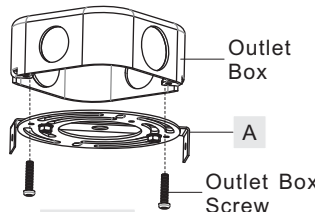 


Figure 2

STEP 3 – Make Wire Connections

- Use standard wire connectors (not included) to make all wire connections. (Connectors are not included with fixture.) Twist connectors until wires are tightly joined together. Wrap each connection with approved electrical tape and carefully stuff all the connected wires into the Outlet Box.

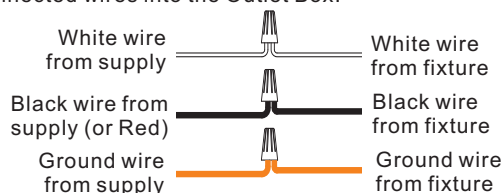 


Figure 3

STEP 4 – Attach Ceiling Canopy to Crossbar

- Line up the holes on the side of the Ceiling Canopy (C) to the mounting holes on the Crossbar (A). Secure them with Mounting Screws (B). Tighten until snug.

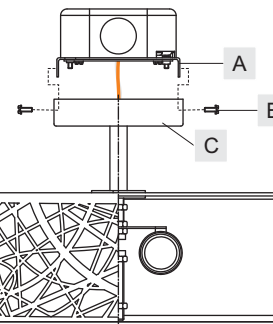 


Figure 4

STEP 5 – Attach Shade and Diffuser

- Adjust the hex nut on the bottom end of the Nipple to proper location for rest components. Place the Shade (F), Flat Washers (I), the Diffuser (G) and Rubber Washers (H) over the end of the Nipple as shown in the illustration. Secure with the Finial (J) and hand tighten until snug.

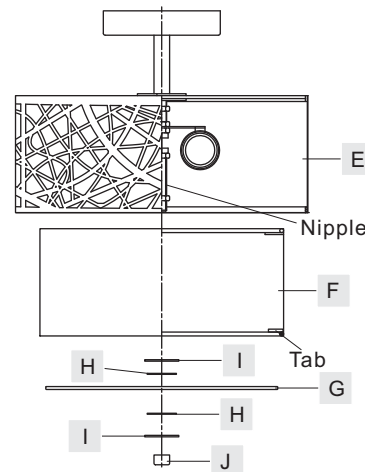 


Figure 5

Thank you for purchasing a Quoizel product.
Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700
or visit us on-line at www.quoizel.com

STEP 6 – Install Bulb

A. This fixture uses standard bulb with standard screw base. Maximum 75 watts. Insert bulb and screw snugly into place.

Your fixture is now assembled and ready to use. Enjoy!


 
 
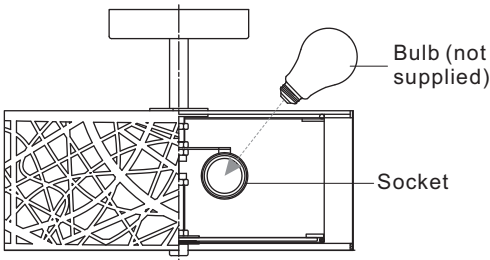 


Figure 6

 PCAE1712C
FINISH: POLISHED CHROME

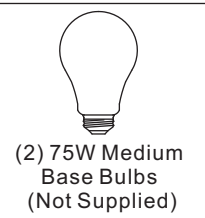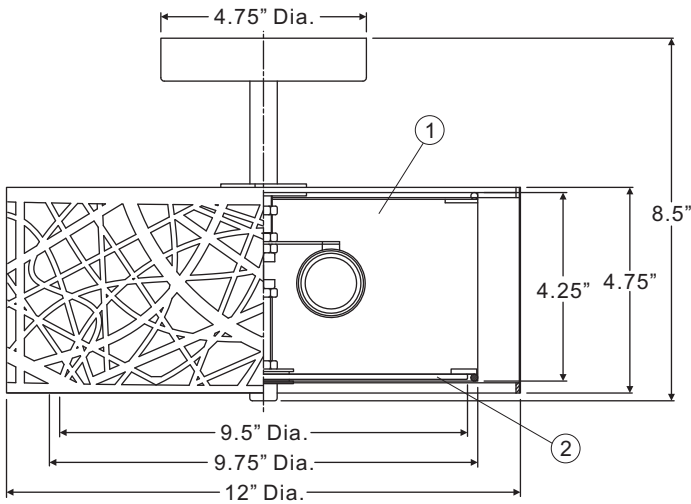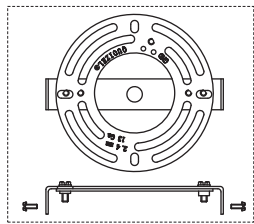

NO.	PART NUMBER	REPLACEMENT PART	QTY.
1	G12723SH	SHADE	1
2	G12724SH	DIFFUSER	1

NOTE: ALL DIMENSIONS ARE ROUNDED UP TO THE NEAREST 1/4"