

SAFETY INFORMATION

Please read and understand this entire manual before attempting to assemble, install or operate the product.


WARNING

- RISK OF ELECTRIC SHOCK - Before beginning installation, turn off electricity at the circuit breaker box or the main fuse box.

CAUTION

- For your safety, read instructions completely before beginning installation.
- If in doubt about electrical installation, consult a licensed electrician.

TOOLS REQUIRED

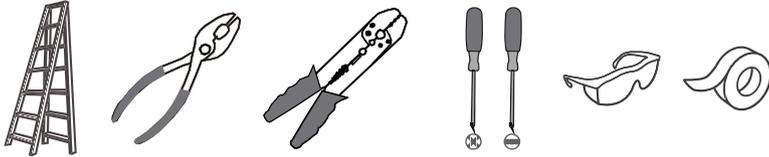


Ratings	120Vac, 60Hz	
	Model No.	Wattage
	PCOVD2827MBK	42W

CARE AND MAINTENANCE


- Wipe clean using soft, dry cloth or static duster. Always avoid using harsh chemicals and abrasives to clean fixture as they may damage the finish.

If you need further assistance call Quozel Customer Care at 1-800-645-3184 (9:00am - 5:00pm EST), or visit us on-line at www.quozel.com.

PACKAGE CONTENTS

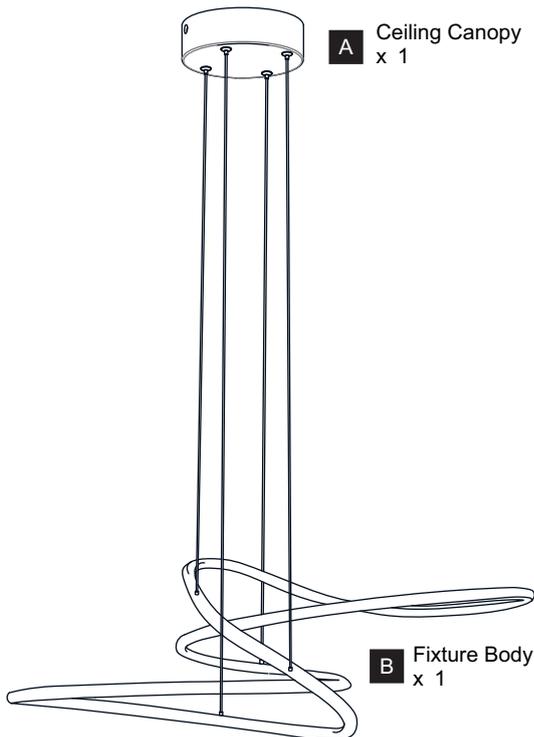


MOUNTING HARDWARE

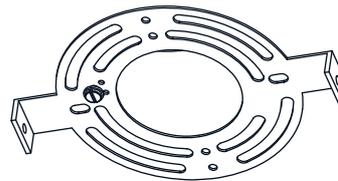

AA Crossbar
x 1



 BB Mounting Screw
x 2



CC Wire Connector
x 3




DD Outlet Box Screw
x 2


INSTALLATION

1 Adjust Cord Length: Fixture Height Adjustable 15.75" to 101.75"


Push the pin and adjust the cord length to achieve your desired fixture hanging height. Then adjust the safety clip close to the nipple in the Canopy.

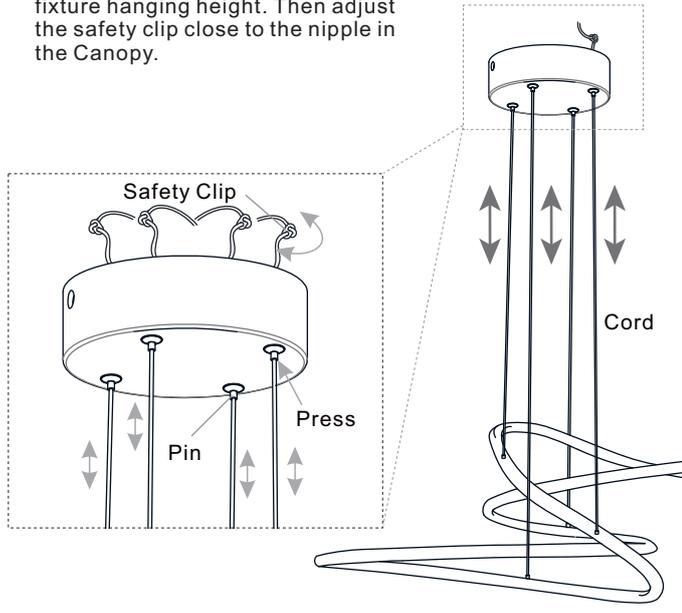


2 Install Crossbar

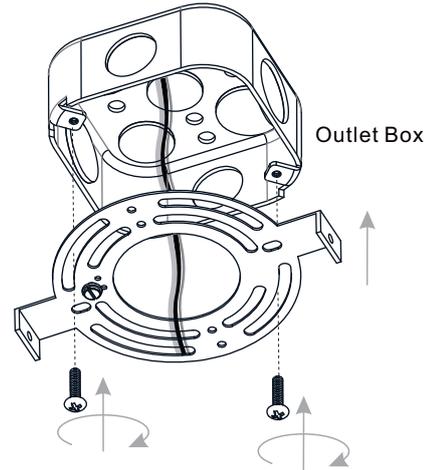

3 Wiring

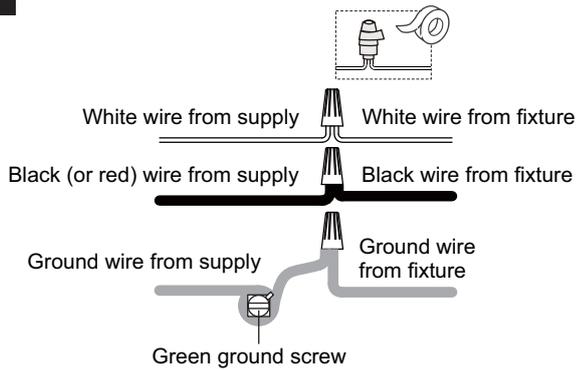

4 Install Ceiling Canopy to Crossbar

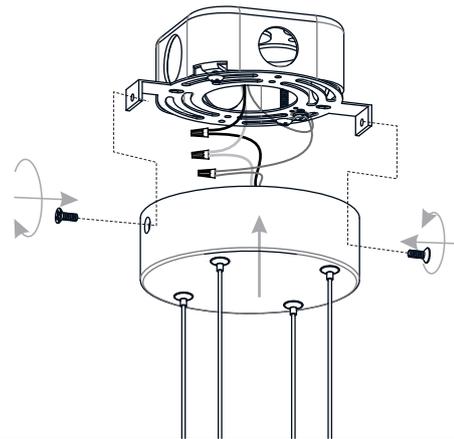

Your installation is now complete! Restore electricity and save this sheet for future reference.