

**Important: Always disconnect the power before installing or replacing bulb and before cleaning or other maintenance.**

This light should be installed by a licensed electrician

## LAMP INSTALLATION AND ASSEMBLY

1. Shut off power to the outlet box. (fig. A)
2. Attach the universal mounting plate to the outlet box, secure with outlet box screws.
3. Feed the cord through the metal bushing into the canopy. Determine the height at which the fixture is to be hung. Set the adjustable cord to the desired length, use wrench tighten the set screw (fig. B) and, if necessary, cut cord to length plus six inches. Attach the cord lock in canopy to prevent slippage, as show in fig. B.
4. Make appropriate electrical connections using wire nuts:
  - a. Connect the fixture's live wire (black) to the live outlet box wire.
  - b. Connect the fixture's neutral wire (white) to the neutral outlet box wire.
  - c. Connect fixture's ground wire (green or uncoated) to the ground outlet box wire. If no ground is present in outlet box, connect fixture's ground wire to the mounting plate using the green screw (included).
  - d. Carefully place connections in outlet box.
5. Attach the canopy to the universal mounting plate, secure with canopy nuts.
6. Holding the glass, screw the gripper to the connector. Adjust the monofilament lines to the desired length. (Be careful the glass do not hit each other.) Pull down firmly on the monofilament line to test the connection. If the line slips, depress the lock and be sure the line is centered. Release the lock and retest.
7. Install 60w medium base bulb. (not included)
8. Restore power to the fixture.


## Monofilament line adjustment instructions:

### To shorten the monofilament line:

Just push the monofilament line up, it will be locked automatically.

### To lengthen the monofilament line:




Lift up on the monofilament line and push up on the lock. While keeping the lock depressed, lower the monofilament line to the desired length. Release the lock to set.

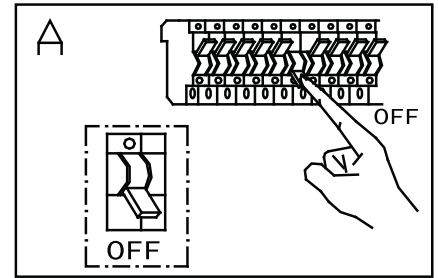

## CARE INSTRUCTIONS

Dusting – Use a clean, dry cloth.

Cleaning – To protect the finish, avoid any harsh abrasives or chemicals.

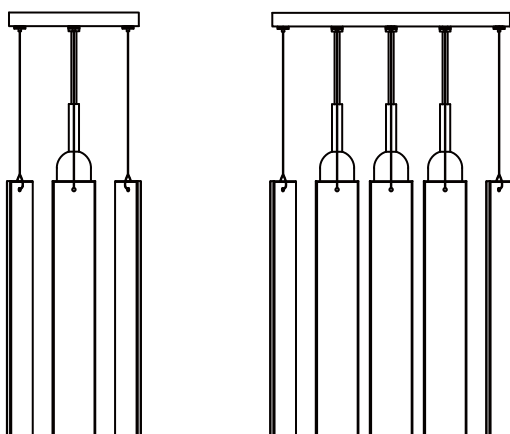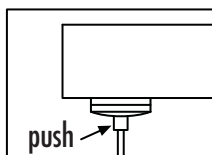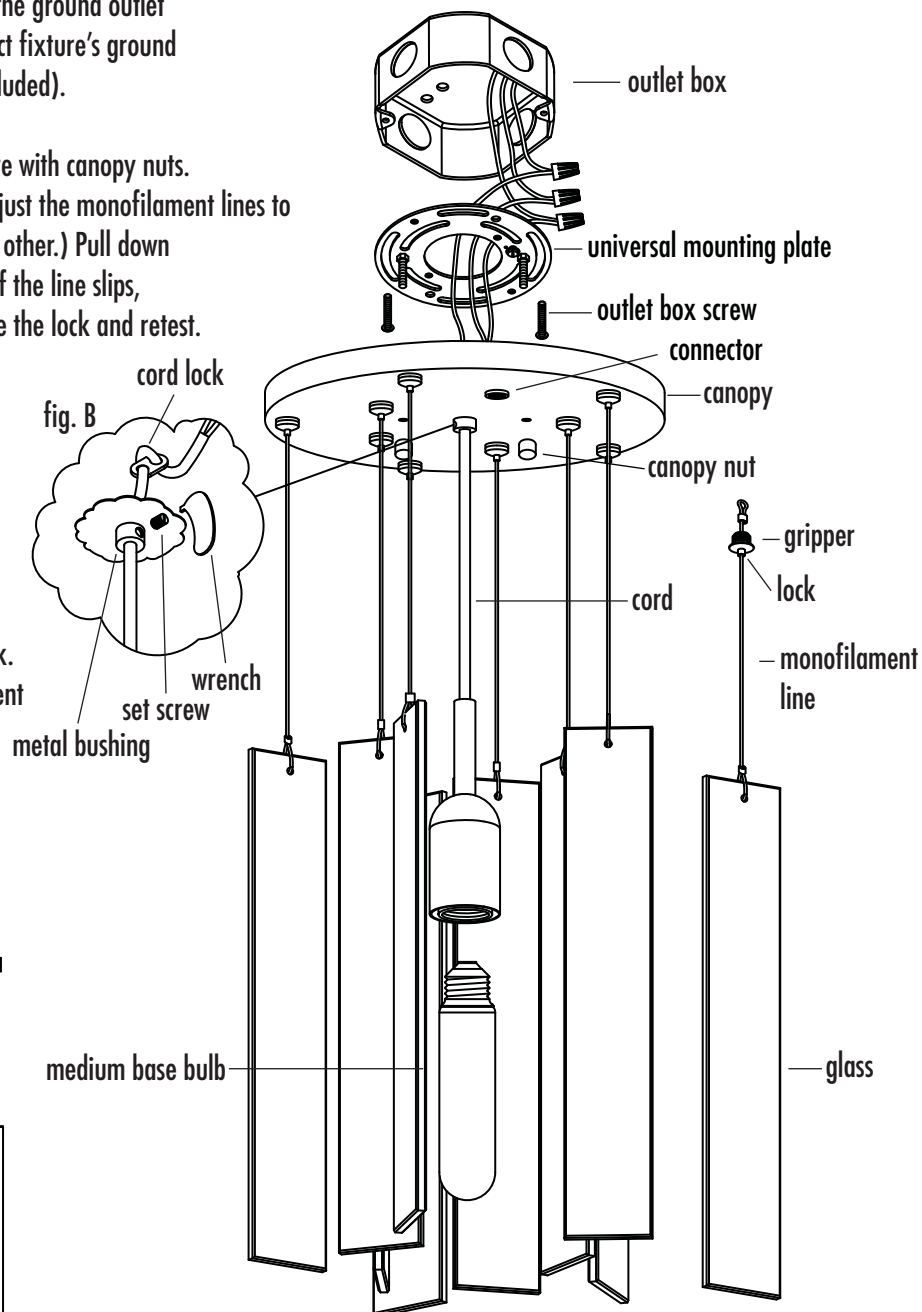

4641

4645

4651

©2013 SONNEMAN - A WAY OF LIGHT