


DECORATIVE ACCESSORIES AND ACCENT FURNITURE

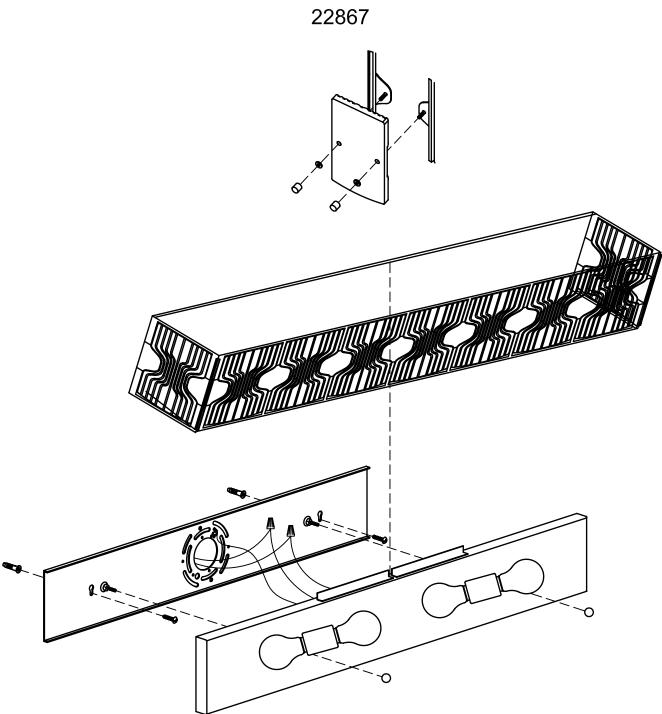

## **ASSEMBLY INSTRUCTIONS**

- 1. Install the back plate and connecting the wires refer to the next page.
- 2. Install the glass on the frame with nut and washer.
- 3. Hook the frame on the back plate.
- 4. Install the bulbs. (Please do not exceed the maximum capacity recommended on the socket.)

PO BOX 558/3325 GRASSY HILL RD. ROCKY MOUNT, VIRGINIA 24151 www.uttermost.com



## UTTERMOST

INSTALLATION INSTRUCTIONS FOR WALL MOUNT FIXTURE

NOTE: ALWAYS TURN POWER OFF BEFORE INSTALLING LIGHTING FIXTURES!

IMPORTANT: YOU SHOULD USE A QUALIFIED ELECTRICIAN TO INSTALL THIS FIXTURE.


## **Installation** (see Fig.A)


- 1. Disconnect power at main electrical panel before installation.
- 2. Pull Supply Wires through larger hole in mounting plate (hole has smooth edge).
- 3. Attach Mounting Plate to Outlet Box using Box Screws provided with Outlet Box. For additional stability on longer fixtures, install Mounting Screws into appropriate Fasteners (Fasteners not provided).
- 4. Follow wiring instructions carefully (listed below).
- 5. Position Coverplate over Mounting Plate, alligning Studs with Coverplate holes and secure with Ballnuts.

 Split the conductors of the **fixture wire** about 4 inches. Being careful not to expose any of the wire inside of the insulation.

Wirina (see Fig.B)

- Connect the fixture ground wire to the outlet box ground wire using wirenut (not provided). Connect outlet box ground wire to mounting plate with GREEN hex-head ground screw to tapped hole in mounting plate marked "GND".
- Connect the half of the fixture wire that is white, marked, or has a ribbed surface to the outlet box supply wire (WHITE). Connect the other half of the fixture wire that is black, unmarked, or has a smooth surface to the outlet box supply wire (BLACK or RED). Use wirenuts provided.
- 4. Spread the electrical splices so that the black wire are on one side of the **outlet box** and the white wire are on the other side.

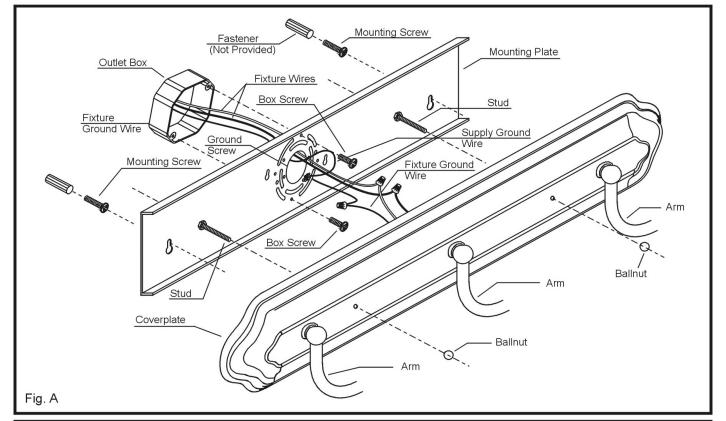

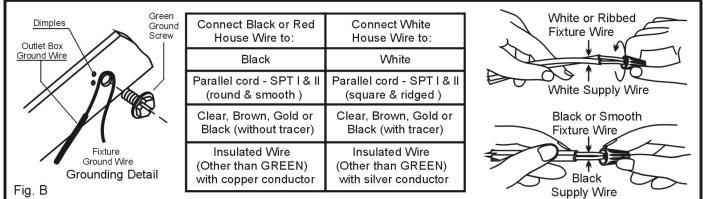

PO BOX 558/3325 GRASSY HILL RD. ROCKY MOUNT, VIRGINIA 24151 www.uttermost.com