

CRYSTORAMA

LIGHTING THE WAY FOR SIXTY YEARS



Crystorama.com


ASSEMBLY INSTRUCTION MODEL #ATL-705-MK-TG



All electrical components must be installed by a licensed electrician in accordance with the National Electric Code and the appropriate local electrical codes.



You will need 3- Med. Bulb
40 Watts Recommended 60Watts Max.
USE LED BULBS FOR EXTENDED USE
THIS FIXTURE IS WET RATED

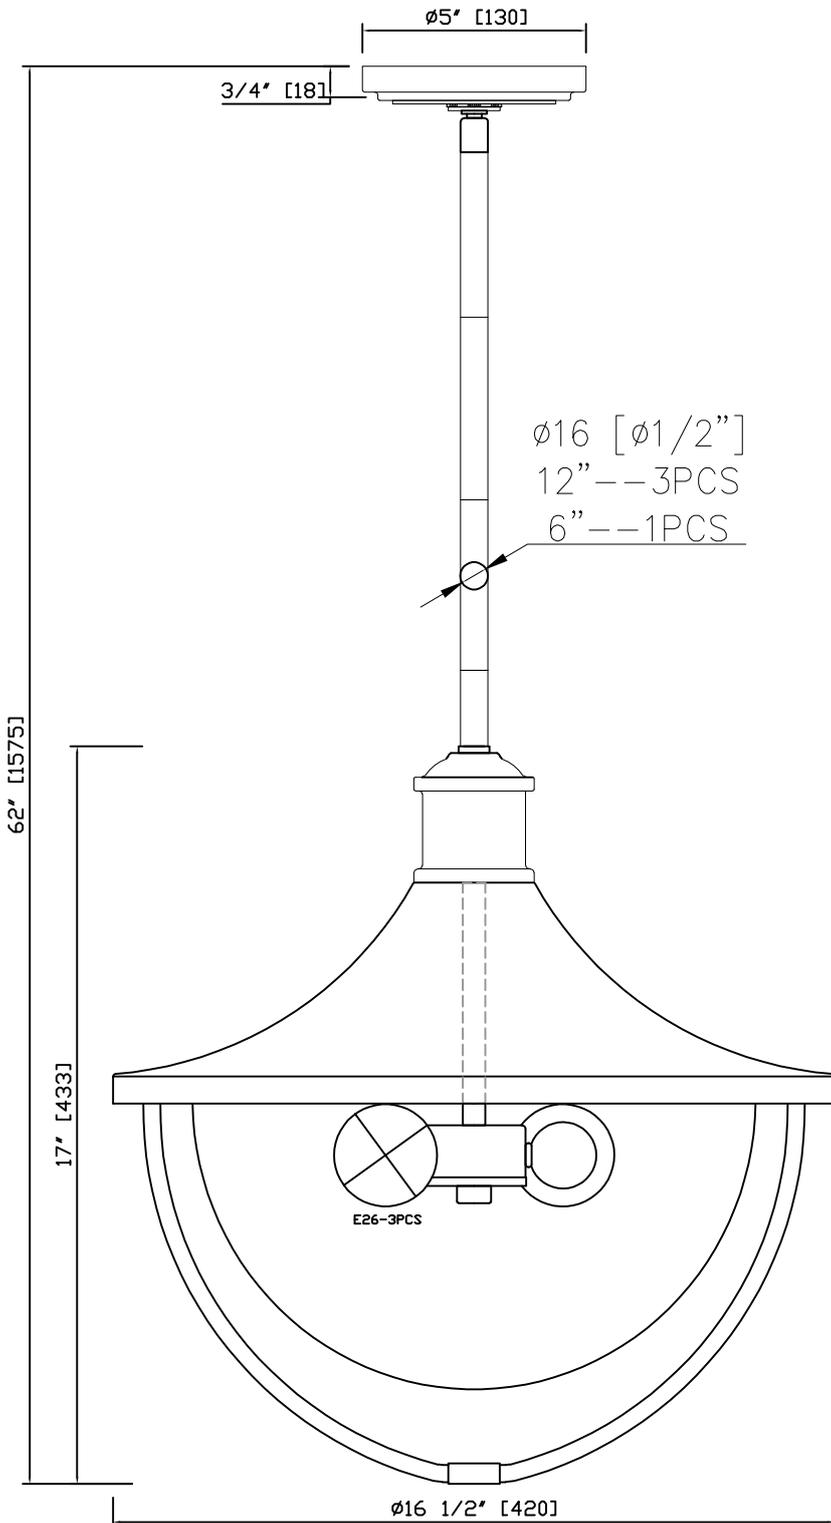


How to Install

1. Remove the bottom frame from the top frame by loosening the 4 flat head screws.
2. Decide the preferred hanging height and choose the correct length of rods needed.
3. Pass the wires through the rods, swivel, screw collar loop and canopy. Screw one end of rod assembly onto the top frame and the other end onto the swivel.
4. Raise the fixture up to the ceiling and install the mounting bar onto the outlet box. Do the wire connections and secure the canopy using the collar loop ring.
5. Place the glass shade inside the bottom frame and secure with the clips.
6. Install the bulb onto the socket. Raise the bottom frame up to the top frame and align the holes on them. While one person hold the frame, the other person tightens the screws using a screwdriver(not provided)

CRYSTORAMA

LIGHTING THE WAY FOR SIXTY YEARS

ASSEMBLY INSTRUCTION MODEL #ATL-705-MK-TG

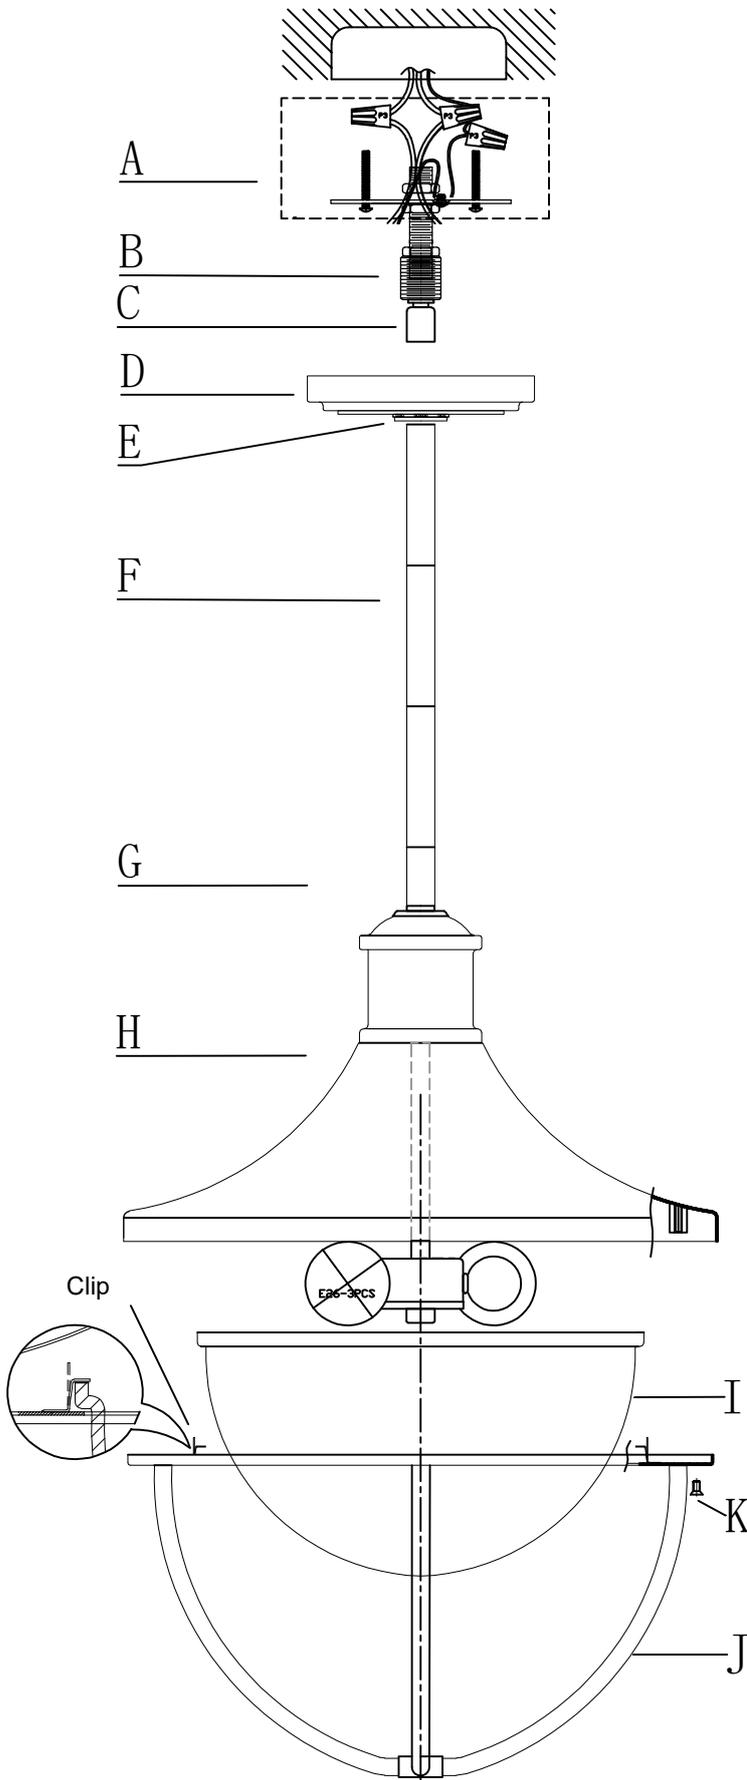

Part Number

Part Numbers

- A. (1)-Mounting hardware
- B. (1)-Screw collar loop
- C. (1)-Swivel
- D. (1)-Canopy Ø5"*0.75"
XAR705MKTGCAN5IN
- E. (1)-Collar loop ring
- F. (3)-Hang rod Ø0.75*12"
XAR705MKTGROD12IN
- G. (1)-Hang rod Ø0.75**6"
XAR705MKTGROD6IN
- H. (1)-Top frame
- I. (1)-White glass shade Ø13.25**H7"
XAR703GLA13.25IN
- J. (1)-Bottom frame
- K. (4)-Flat head screws