



# LIM360

## ASSEMBLY & INSTALLATION INSTRUCTIONS

INFO@PABLODESIGNS.COM  
888 MARIN STREET  
SAN FRANCISCO, CA  
94124

PABLODESIGNS.COM



# Pablo® LIM360

PLUG TYPES AVAILABLE:



N. AMERICA




UK



EU




AU

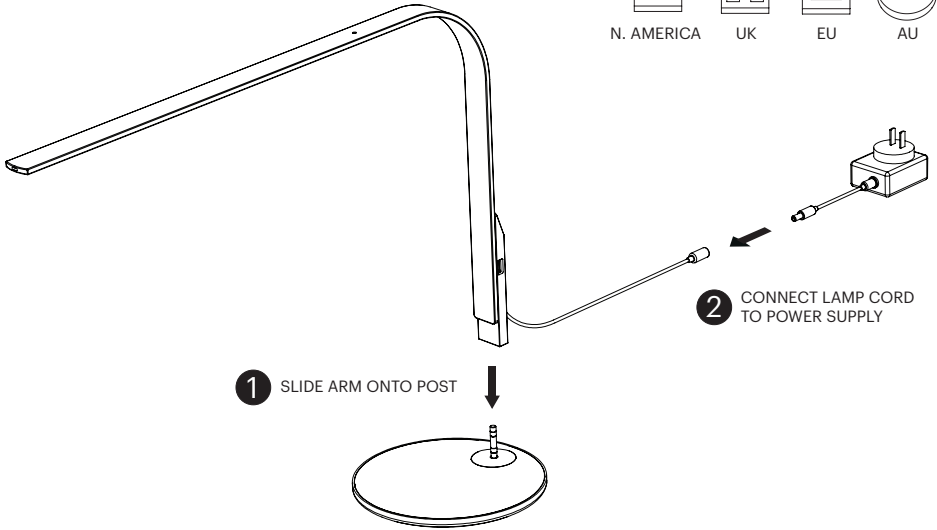


1 SLIDE ARM ONTO POST

2 CONNECT LAMP CORD  
TO POWER SUPPLY

## LIM360 BASE INSERT REMOVAL

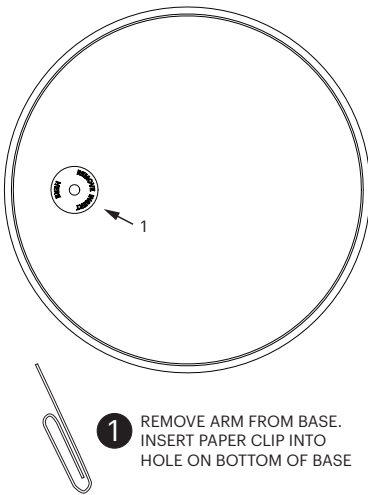

1 REMOVE ARM FROM BASE.  
INSERT PAPER CLIP INTO  
HOLE ON BOTTOM OF BASE

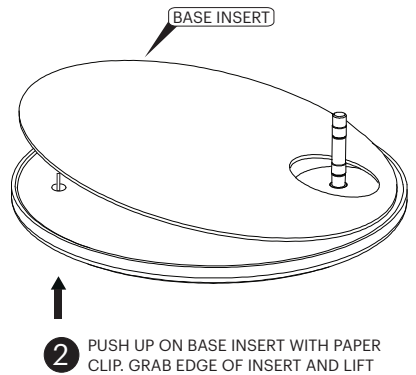


2 PUSH UP ON BASE INSERT WITH PAPER  
CLIP. GRAB EDGE OF INSERT AND LIFT

NOTE: BASE INSERT IS MAGNETICALLY ATTACHED FOR EASY REPLACEMENT. REMOVAL OF INSERT IS INTENDED FOR CLEANING AND REPLACEMENT PURPOSES. CONTACT MANUFACTURER TO ORDER REPLACEMENT INSERTS.

# Pablo®


## LIM360

- 1** DRILL 1.125 INCH (2.9 CM) DIAMETER HOLE INTO TABLE SURFACE. MAXIMUM TABLE THICKNESS IS 1.375 INCHES (3.5 CM)

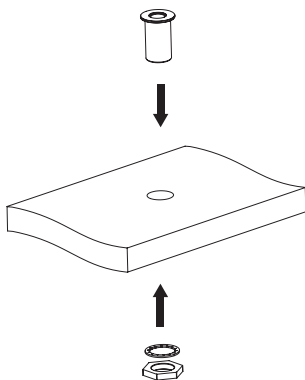


- 2** THREAD WASHER AND NUT ONTO GROMMET AS SHOWN AND TIGHTEN TO SECURE

- 3** SLIDE ARM ONTO POST AND THEN FEED LAMP CORD THROUGH PLASTIC BUSHINGS AND INTO CHANNEL IN POST

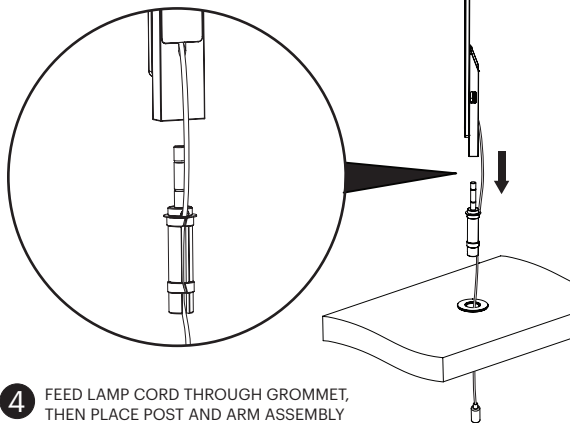

- 4** FEED LAMP CORD THROUGH GROMMET, THEN PLACE POST AND ARM ASSEMBLY INTO GROMMET AS SHOWN

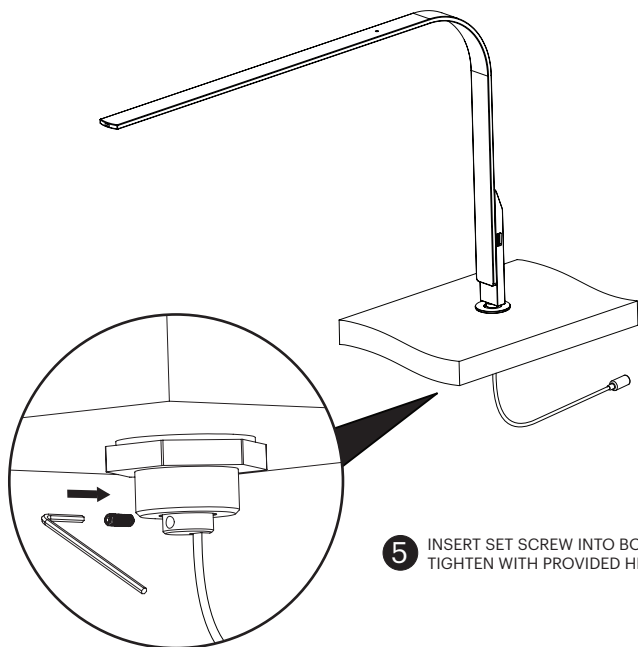


- 5** INSERT SET SCREW INTO BOTTOM OF POST AND TIGHTEN WITH PROVIDED HEX KEY TO SECURE POST

- 6** CONNECT LAMP CORD TO POWER SUPPLY
- 
- A line drawing of a power supply unit with a two-prong electrical plug. The lamp cord is shown plugged into the side of the power supply.

# Pablo®

## LIM360

### LIM360 USB CHARGING

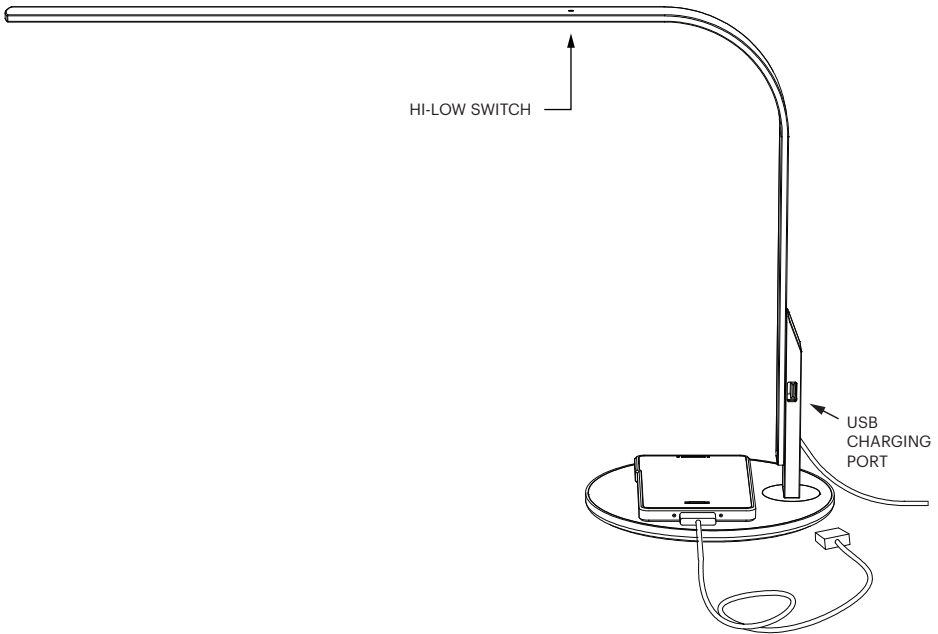

### HIGHLIGHTS

SINGLE 5.0V USB OUTPUT SUPPORTS CHARGING FOR SMARTPHONES AND OTHER SIMILAR MOBILE DEVICES.

### SPECIFICATIONS

USB 2.0 OR 1.1 STANDARD CORD REQUIRED  
OUTPUT VOLTAGE: 5VDC + - 5%  
OUTPUT CURRENT: 1A MAX

### NOTE

LIM360 WILL CONTINUE TO CHARGE YOUR MOBILE DEVICE EVEN WHEN LAMP IS IN THE "OFF" POSITION.

PLEASE REFER TO YOUR MOBILE DEVICE'S USER MANUAL FOR COMPATIBILITY AND CHARGING TIME. PLEASE REFRAIN FROM LEAVING YOUR DEVICE PLUGGED IN FOR LONGER THAN THE RECOMMENDED TIME, OTHERWISE IT MAY RESULT IN OVER CHARGING.

PRESS AND HOLD SWITCH FOR 2.5 SECONDS TO TURN OFF. PRESS BRIEFLY TO CYCLE THROUGH THREE STAGES.

### CARE INSTRUCTIONS

WIPE CLEAN WITH A SOFT DAMP CLOTH. AVOID AMMONIA-BASED CLEANERS.